



## Drain Check Valve Illustration

# Model SRS, PROS or INST

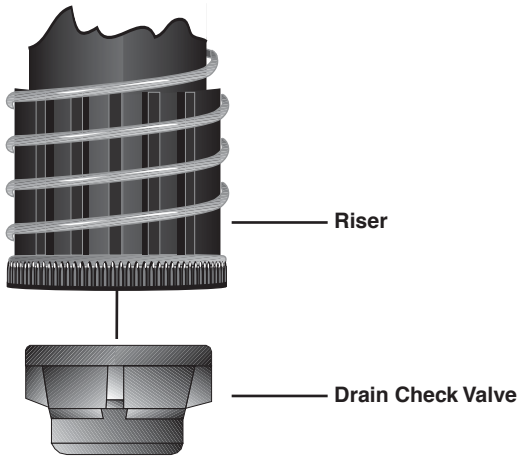


## Drain Check Valve Illustration

# Model PS

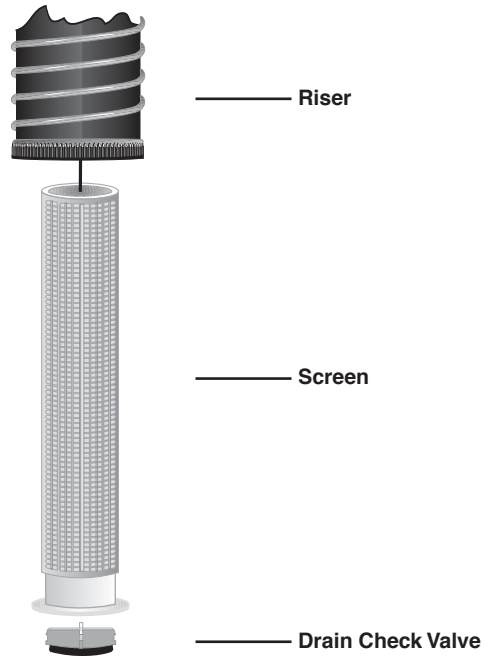

## Drain Check Valve Illustration

# Model PGM

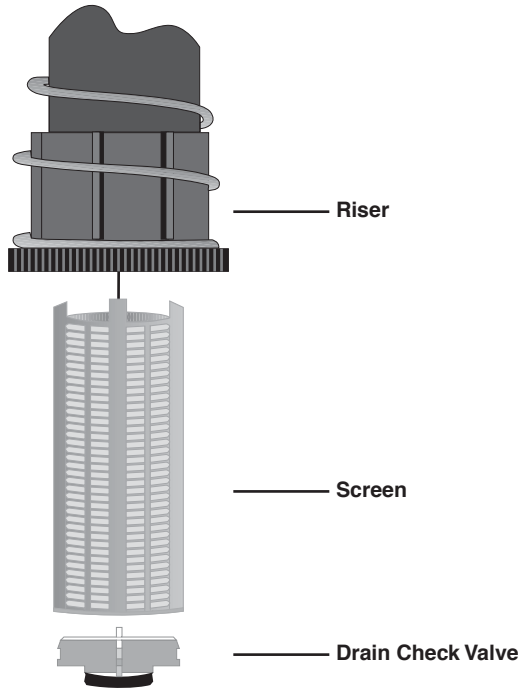

## Drain Check Valve Installation

### for PROS, INST, SRS and PS sprays, PGM rotors

**APPLICATION:** For use in sprinkler heads where low head drainage is a problem.

Unthread the body cap and remove the internal assembly from the sprinkler body. Turn the internal assembly upside down to access the opening in the bottom of the riser.

Insert the large, irregular shaped end of the Drain Check Valve assembly into the bottom of the riser. The small circular portion of the Drain Check Valve assembly will remain outside of the riser.

Replace the internal assembly and tighten it into the body.

**Note:** On the PGM rotor ONLY, Drain Check Valves are also available factory installed. To order, simply add the letter "V" to the end of any PGM model number. The shrub version of the PGM comes from the factory with a Drain Check valve already installed.

**Hunter**<sup>®</sup>

Hunter Industries Incorporated • The Irrigation Innovators

[www.HunterIndustries.com](http://www.HunterIndustries.com)

© 2003 Hunter Industries Incorporated  
P/N 700201 LIT-201 7/03